PROGRAMMER

PROGRAMMER

Display

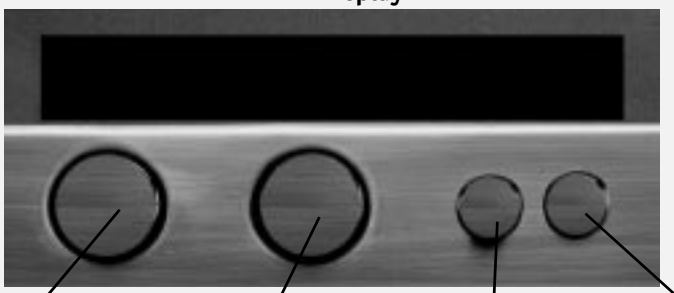

Knob 1	**Knob 2**	**Knob 3**	**Knob 4**
is a selector which allows you to select the oven function required to cook your meals.	allows you to programme: the actual time, the cooking time, the end of cooking time, the temperatures and the power levels.	is used to select and confirm the different operations	allows you to select the "Keep Hot" special function

DESCRIPTION OF THE DISPLAY

Flashing surround: functions that can be set or modified.
Fixed surround: functions already activated.

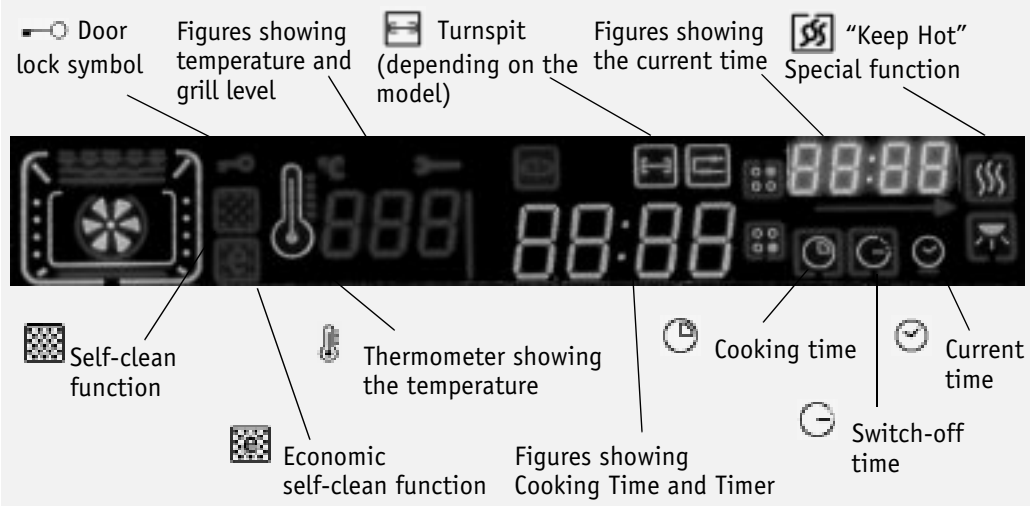

QUICK GUIDE TO OVEN OPERATION

After connecting the oven to the power supply for the first time, or after a power cut, the display shows "STOP".

To operate the oven:

1. Turn **knob 1**, the index on the top.
2. Press **button 3,** 3 times.
3. Turn **knob 2** to set the current time. Wait a few seconds for the automatic confirmation of the data or press button 3.
4. Select the cooking function.

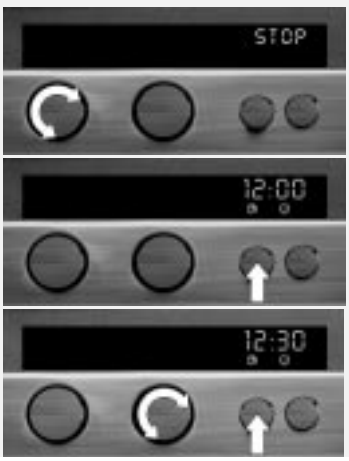

Selecting the cooking functions

1. Turn knob 1 to the required function: the display indicates the temperature or the grill level proposed.
   If this value is correct, wait a few seconds to have the value accepted automatically.

To change temperature or grill level:

1. Turn **knob 2:** the display shows the temperature or the grill level while flashing.
2. Press **button 3** to confirm or wait a few seconds to have the data confirmed automatically.

The oven starts: on the display, the indicators next to the symbol light up progressively, indicating that the temperature is rising. The symbol also lights up.

N.B.
A few seconds after the function is selected, the oven starts cooking: the temperature or the level of the grill can still be set or changed.

Once the food is cooked:

- Switch the oven off by turning **knob 1**, the index to the top.

General remarks:

- Remember that to cancel any selection, all you need to do is to turn **knob 1** to **"0"**.
- If you change the position of **knob 1** while cooking is in progress, all values previously set are cancelled.
- For safety reasons, the oven switches off automatically after 4 hours 30 minutes of continuous operation.

OPERATING THE OVEN WITH THE PROGRAMMER

Selecting the current time if it is not already set:

1. Turn **knob 1** with the index to the top.

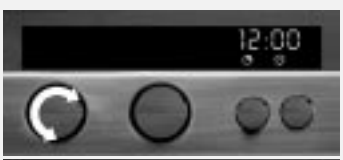

2. Press **button 3** twice.

3. Turn **knob 2** to set the current time:
the time flashes on the display.

4. Press **button 3** or wait a few seconds to have the data confirmed automatically.

To modify the time:
Turn **knob 1**, the index to the top and repeat the operations described above.

OPERATING THE OVEN WITH THE PROGRAMMER

Selecting the cooking time

The cooking time allows you to operate the oven (with any function) for a specified time, at the end of which the oven switches off automatically.
The maximum programmable cooking time is 4 hours for all functions, including the self-cleaning function; however, for the defrosting function it is 10 hours.

1. After setting the function and the temperature or the level of the grill:
   See **"Quick guide to oven operation" - "Selecting the cooking function"**

2. Press **button 3** until the symbol and "-0:00" appear on the display.

3. Turn **knob 2** in a clockwise direction: the time selected flashes on the display. The message "-" in front of the selected value indicates that the time will start to count down to "0".

4. Wait a few seconds for the automatic confirmation of the data or press **button 3**.
   The oven will start to operate.

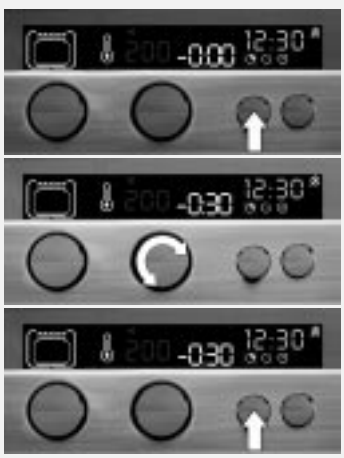

To change the temperature or the level of the grill set:

1. Turn **knob 2** and confirm by pressing **button 3** or wait a few seconds to have the data confirmed automatically.

Once the food is cooked:

An audible signal begins, the display shows **"End (End)"** and the oven switches off automatically. The oven light stays on for a while.

1. Press **button 3** to stop the audible signal.

2. Turn **knob 1** back, the index to the top.

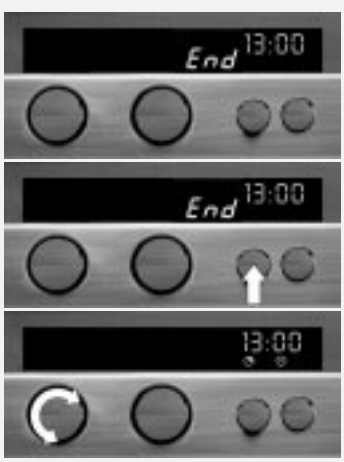

SELECTING THE SWITCH-OFF TIME

Using this operation it is possible to schedule the oven to start at a specified time and to set the time at which you want to finish cooking, by programming it to switch off automatically.

Example: if the time is now 9:00, it is possible to schedule the operation of the oven for a period of 45 minutes, in such a way that the cooking ends at 12:30; the maximum time that can be programmed is 23 hours and 59 minutes.

1. After setting the function and the temperature or the level of the grill:
   See **"Quick guide to oven operation" - "Selecting the cooking function"**.

2. Press **button 3** until the symbol and "-0:00" appear on the display.

3. Set the cooking time by turning **knob 2:** the time selected (e.g. 45 minutes) flashes on the display.

4. Press **button 3** to confirm the data selection: the symbol appears and the display shows the current time and the cooking time (e.g. 9.00 o'clock + 45 minutes = 9:45).

5. Select the time at which you want the cooking to end, by turning **knob 2** (for example, 12:30)

6. Press **button 3** to confirm the data selection, or wait a few seconds to have the data confirmed automatically.

7. The oven starts at the pre-set time (the switch-off time less the cooking time: for example.: 11:4).

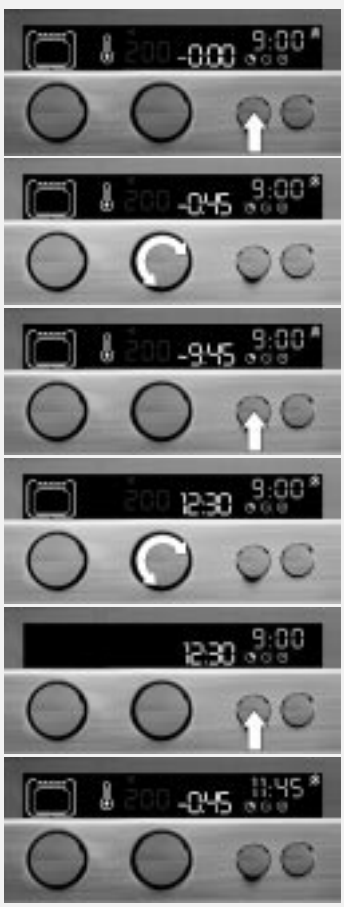

- To change the temperature or the level of the grill set, turn **knob 2 one notch.**

- To verify or modify the cooking time (45 minutes) or the switch-off time (12:30), press **button 3**, while turning **knob 2**.

- When the oven starts.
  The symbols and the cooking time set are shown on the display.

Once the food is cooked:

An audio signal begins. The display shows the message "End", and the oven switches off automatically.
The internal light stays on for a moment.

1. Press **button 3** to stop the audible signal and turn the light out.

2. Turn **knob 1** back with the index to the top.

SPECIAL FUNCTION

KEEP HOT

This function is only available when programming the cooking time or switch-off time.

This function keeps the temperature in the oven at **60°C** at the end of the cooking cycle. To cancel the function, turn **knob 1**, to bring the index to the top.

After setting the function, the temperature, the cooking time or the switch-off time:

1. Press **button 4** until the symbol and the message "--C" appear on the display.
2. Turn **knob 2** to select "60C".
   Press **button 4** or wait a few seconds to have the data confirmed automatically.

At the end:

An audio signal starts and the display shows "60°C".

1. Press **button 3** to stop the audible signal.
2. The oven will maintain a temperature of 60°C as long as **knob 1** is not turned back with the index to the top.

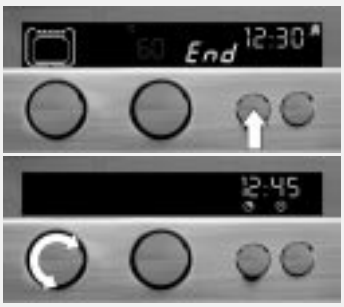

SELECTING THE TIMER

The oven has a timer which can be used to control the length of cooking processes carried out using appliances other than the oven (for example: microwaves, built-in hobs, toasters). (The maximum time which can be set is
4 hours - regardless of the oven function).

To set the time:

1. Keep **knob 1**, the index at the top as in Fig. 1. The display shows the current time.
2. Press **button 3** until the symbol appears on the display.
3. Turn **knob 2** in a clockwise direction. The time selected flashes on the display. The message "-" in front of the selected value indicates that the time will start to count down to "0".
4. Press **button 3** or wait a few seconds to have the data confirmed automatically.

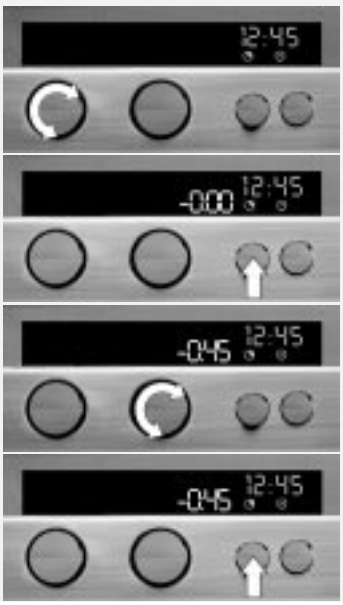

When the set time has elapsed:

An audible signal begins and the display shows "End".

Press **button 3:** the audible signal stops.

NOTES

Ecological Paper

5019 310 66032

GB

Printed in Italy

1/0302